



FRAME ASSEMBLY INSTRUCTIONS




1. Front of frame

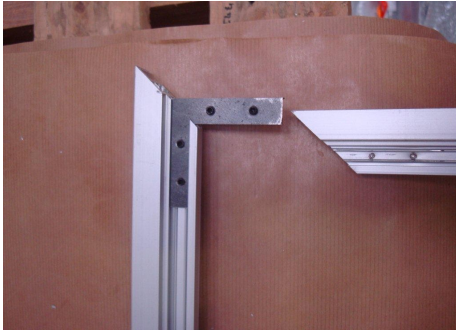


2. Back of frame
Lengths will arrive with corners already fixed into one side of the lengths

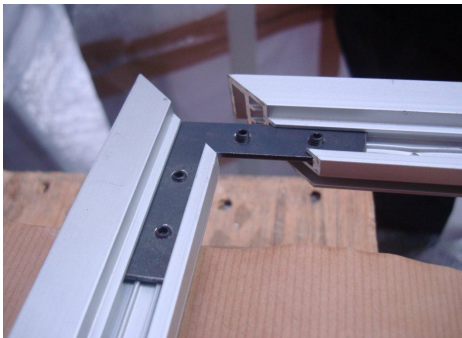

3. Insert the free end of the corner piece into the frame length
Tighten with the allen key provided
Make sure the mitre of the lengths fit flush together

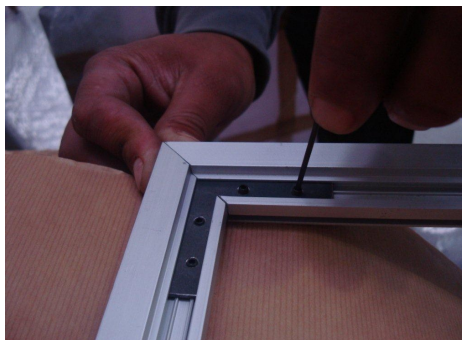

4. Tightening of corner piece with allen key
Mitre flush together

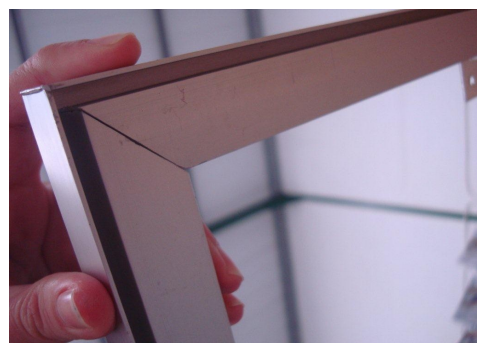

5. End result - front of frame with mitre flush together

WALL BRACKET



The frame lengths have been supplied with wall brackets at intervals
Each bracket has pre drilled holes
Use the wall brackets and pre drilled holes to install the frame onto the wall

Assemble the entire frame first before installing the frame onto the wall